



Add a Serial Port Protocol Camera to ZowieKBD

Click  to add manually or click  ->Device Management->CAM List->Add to add manually.

Use the up, down and top button of the joystick to move the cursor and modify the parameters.

Select the protocol as VISCA/PELCO D/P and enter the correct baud rate and protocol address. (The default baud rate of ZowiePTZ is 9600, and the default address is VISCA: 1, PELCO D: 1, PELCO: 0)

Cam numbers can be specified or automatically assigned in the order they are added.

Add Camera		
Name	Camera	>
Type	VISCA	✓
Cam	Auto	✓
Baud Rate	9600	✓
Devices Addr	1	>
Stream Addr	rtsp://192.168.1	>
Add		

If the camera supports RTSP streaming, please enter the camera's RTSP URL and RTSP authentication and click Add.