

Add/Modify Groups

Method 1:

Click  or  -> Device Management → CAM List to enter the list of added cameras.

Use the up, down and top button of the joystick to move the cursor and select the camera to be added to the group, and use the left, right and top button of the joystick to select the Add Group operation below.

CAM List			
CAM1(1,2)	Camera-G50.V	192.168.1.208	Sony VISCA
✓CAM2(2)	Camera-	192.168.1.88	Sony VISCA
CAM3(1)	Camera-In	192.168.1.208	ONVIF
✓CAM4(1)	Camera	1-9600	PELCO D
✓CAM5	Camera-KEYBOARD ...	192.168.1.125:5961	NDI*
✓CAM6	Camera-KEYBOARD ...	192.168.1.103:5961	NDI*
Add Group	Edit	Add	Delete

After adding, the camera name will be followed by the group number.


CAM List			
CAM1(1,2)	Camera-G50.V	192.168.1.208	Sony VISCA
CAM2(2,3)	Camera-	192.168.1.88	Sony VISCA
CAM3(1)	Camera-In	192.168.1.208	ONVIF
CAM4(1,3)	Camera	1-9600	PELCO D
CAM5(3)	Camera-KEYBOARD ...	192.168.1.125:5961	NDI*
CAM6(3)	Camera-KEYBOARD ...	192.168.1.103:5961	NDI*
Add Group	Edit	Add	Delete

Method 2:

Click  -> Device Management->Group List->Add and select Add a New Group, or long press  to Add a new group.

Group List		
Group1	Group name	CAM #1,3,4
Group2	Group name	CAM #1,2
Group3	Group name	CAM #2,4,5,6
Edit	Add	Delete

Entering a name for the group, click the "+" below to add a camera.

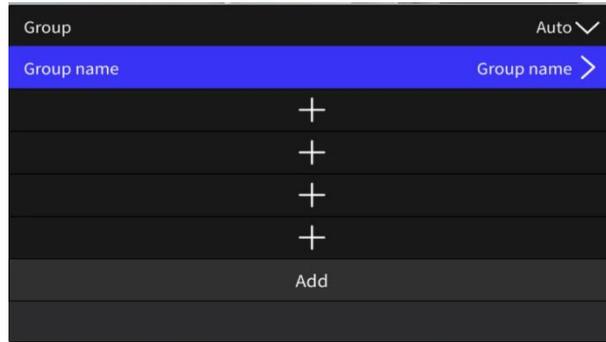

Tips:

Adding a group, please confirm the resolution of the cameras in the group. The four-grid preview can be performed only when the preview resolutions of the cameras are consistent. Otherwise, the cameras with mismatched resolutions cannot be previewed.