



***Tips:***

Adding a group, please confirm the resolution of the cameras in the group. The four-grid preview can be performed only when the preview resolutions of the cameras are consistent. Otherwise, the cameras with mismatched resolutions cannot be previewed.

## Switch Active Camera/Group

When switching cameras, please stay in the window preview interface instead of the settings interface

### Switch active camera

#### Method 1:

Press  to enter the quick camera list, rotate  and move the cursor.

CAM List				↑ GROUP
CAM1	Camera-In	192.168.1.208	ONVIF	
CAM2	Camera---	192.168.1.148	ONVIF	
CAM3	Camera---	192.168.1.21	ONVIF	
CAM4(1)	Camera---	192.168.1.47	ONVIF	
CAM5	Camera---	192.168.1.56	ONVIF	
CAM6(1)	Camera---	192.168.1.47	Sony VISCA	
CAM7	Camera---	192.168.1.56	Sony VISCA	

Select the desired camera and press the P/T SPEED key  to switch camera.

#### Method 2:

Use the alphanumeric Keyboard +  to switch cameras.

### Switch active group

#### Method 1:

Press  and turn the knob clockwise to enter the quick group list.  
When the cursor is on the first camera, continue to move upward to switch to the group quick switch list.

Group List			↓ CAM
Group1	Group name	CAM #1,2,3	

#### Method 2:

Use the alphanumeric Keyboard +  to switch groups.

#### Tips:

1. When the keyboard is in a single grid and you select to switch a group, the ZowieKBD will automatically switch to a four-grid display.
2. When the keyboard is in a four-square grid and you choose to switch cameras, the keyboard will automatically replace the camera in the current window.
3. When the camera currently displayed in the four-grid is changed, the changed