
Setting/Calling presets

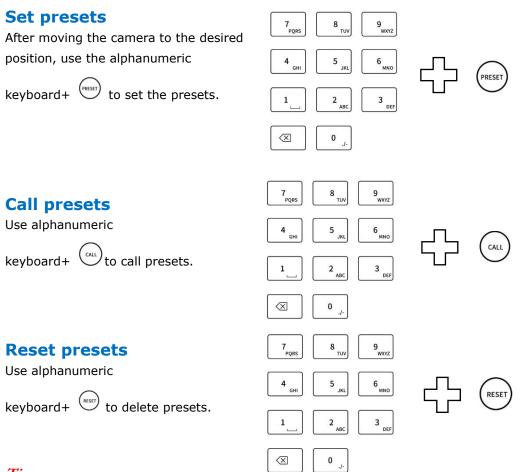

Tips:

- 1. The preset position can support up to 0-255. If the number exceeds this, the input/call will fail.
- 2. The NDI protocol does not support deleting presets.