



Button Function Description

ZowieKBD at a Glance

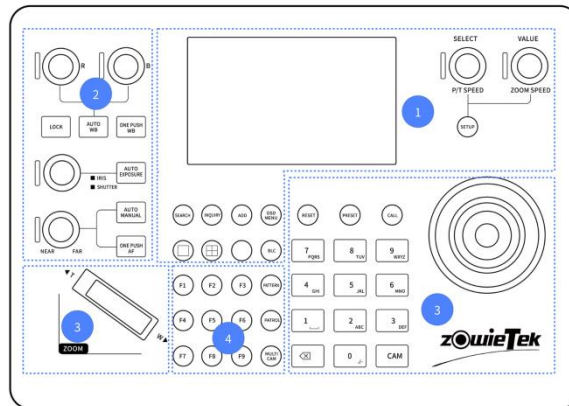

NUM	Zone	Function
1	LCD and Settings	Used for preview, ZowieKBD settings and camera interaction
2	Camera Image Adjustment	Set exposure, focus, and white balance.
3	Camera Control	Control the pan/tilt/zoom of camera, set/call/reset presets.
4	Fn and Muticam	For firmware upgrading.

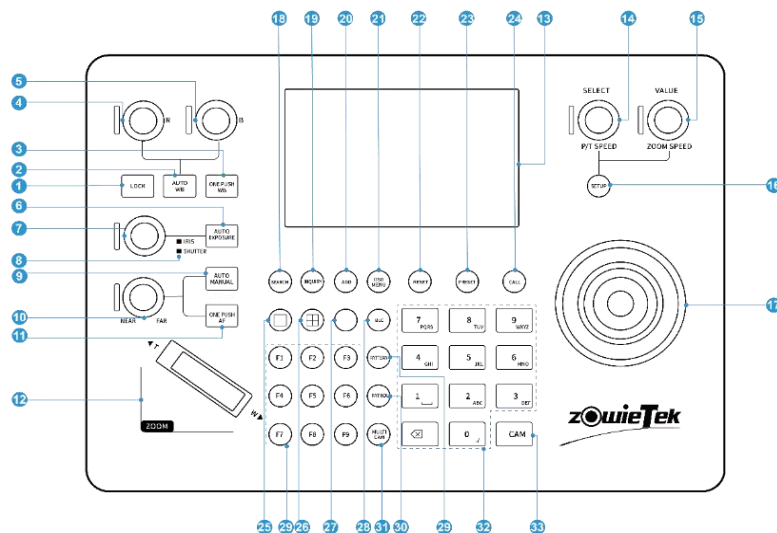

1. Lock

Lock all ZowieKBD functions, the light is on when locked

2. Auto White Balance

Press to switch between Auto/Manual /Indoor /Outdoor /One-push/Manual white balance.

3. One Push WB

Trigger one-push white balance, automatically switch to one-push white balance mode when in other mode.

4. Manual Red Adjustment for White Balance

Automatically switch to manual white balance mode when in other white balance mode.

5. Manual Blue Adjustment for White Balance

Automatically switch to manual white balance mode when in other white balance mode.

6. Auto Exposure

Press to switch between auto/manual/shutter priority/aperture priority/brightness priority modes.

7. Manual Adjustment for Exposure

Adjust different exposure parameters according to different exposure modes.

Mode	Parameters
AAE	Iris+/-
SAE	Shutter+/-
Bright	Bright+/-
Manual	Iris/Shutter (Press the knob to switch adjustment parameters)
Auto	Automatically switch to manual mode

8. Exposure mode indicator

The current mode can be confirmed by the light of the button/knob

Exposure Mode	Knob	IRIS	SHUTTER	AUTO Exposure Button
Auto	OFF	OFF	OFF	ON
Manual	ON	On	OFF	OFF
SAE	ON	OFF	ON	ON
AAE	ON	ON	OFF	ON
Bright	ON	OFF	OFF	ON

9. Auto/Manual Focus

Press to switch between auto/manual/one-push focus.

10. Manual Adjustment for Focus

Manually focus far/near, automatically switch to manual focus mode when in other mode.

11. One Push AF

Trigger one-push focus, automatically switch to one-push focus when in other mode

12. Zoom Seesaw

Zoom in/out

13. LCD

Video preview and settings

14. P/T Speed

Set the horizontal/vertical rotation speed

15. Zoom Speed

Set the zoom speed

16. Setup

Enter/exit the keyboard setting interface

17. Joystick

Any directions to control the camera direction

18. Search

Search for cameras on the same network segment through Sony VISCA/ONVIF/NDI protocols

19. Inquiry

View/edit/add cameras, add groups

20. Add

Through IP VISCA(UDP)/IP VISCA(TCP)/ONVIF/VISCA/Pelco D/Pelco P/NDI/Sony VISCA to add camera

21. OSD Menu

Call/exit camera's OSD menu

22. Reset

Reset presets

23. Preset

Set presets

24. Call

Call presets

25. Single Grid Switch

Switch single grid preview

26. Four-Grid Switch

Switch four-grid preview

27. HDMI Switch

Switch HDMI priority/LCD priority output

28. BLC

Turn on/off Backlight

29. Pattern

Reserve

30. Patrol

Reserve

31. Multi Cam

Number + MULTI CAM to switch group

32. Numeric Keypad

Numeric-alphabetic input

33. Cam

Number + Cam to switch camera