


Navigating the Menus


Method 1: Use the joystick to control the menu

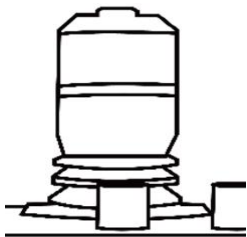

Action	Response
Up/Down	Control the cursor to move up and down
Right/Click	Enter the next menu
Rotate	Return to the previous menu

:

Method 2: Use the knob to control the menu

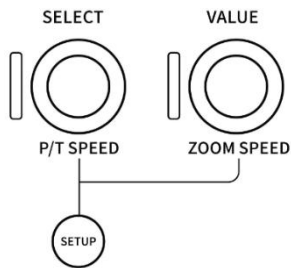

Action	Response
Setup	Open the menu/return to the previous menu
P/T Speed	Rotate: Move the cursor Click: Enter the next menu
Zoom Speed	Rotate: Modify the value of the current parameter Click: Confirm parameter modification